



0814 Safety Guidance



Using the Pressure Washer

- 1. Wear protective equipment including goggles and waterproof overalls.
- 2. Hold the lance in both hands when squeezing the trigger because the water pressure will make it "kick back".
- Do not aim the water jet at yourself, any other persons, or any animals. It will cause an injury.
- Do not spray the water jet over any electrical equipment. This could cause a short circuit and fire. This could cause a fatal electric shock.
- Stop the engine before leaving the machine unattended.
- Do not connect or disconnect a pressure hose or lance while the washer is pressurised. Stop the engine, and squeeze the lance trigger to release
- 7. Stop the engine and squeeze the lance trigger to release the pressure when not in use.
- 8. If working in cold conditions, make sure that the water in the machine will not start to freeze when not in use.
- 9. After work turn the detergent off or remove the detergent feed. Run the washer on just water to flush the detergent out. Then stop the engine, and squeeze the lance trigger to release the pressure.
- 10. Drain the machine if there is any danger, of overnight frost.
- 11. Make sure that all the water filters are cleaned and properly protected before you store the machine.
- 12. If the equipment does not work properly, do not attempt to repair it. Contact the hire company.















44 (0) 121 333 4109







Pressure Washer

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment

It is important to read all of this leaflet **BEFORE** you use the Pressure Washer

- 1. Diesel fuel is highly flammable. Take care not to cause a fire or
- This pressure washer is designed for high pressure water washing.
- The action of this pressure washer can cause injury or damage if the equipment is not used in a careful and controlled way.
- Familiarise yourself with how the equipment works before starting work.
- Think ahead to make sure you will always be working safely.
- You should have at least the following items of personal protective equipment Impact resistant visor or goggles:

Ear muffs or plugs giving protection for levels up to 88 dB(A) Waterproof overalls

Waterproof boots

Waterproof gloves

- This equipment must not be used by minors. Or by anyone under the influence of drugs or
- This pressure washer is designed for operation by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.





2450 Regents Court

The Crescent



















Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting materia is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability pero-nave arisen from the use of any such document/material. Only Acts of Parliament and Statutory Ins from the use of any such document/material. Only Acts of Parliament and Statu have the force of law and only the courts can authoritatively interpret the law.

©Copyright Hire Association Europe April 2011

Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

RUN/STÓP control. nse the proper company. ΛiuO regarded as misuse by the hire damage the engine and will be siqT decompression lever. 14. Never stop the engine using the

Then start the engine again. Stop the engine using the stop control. engine fires up, do not try to grab it. 13. If you let go of the handle when the handle off the shaft.

12. If the engine is now running, slide the from instruction 7 above. smoothly the engine should fire up. If it doesn't, go through the steps again

iowering the decompression lever 11. Crank the engine strongly before handle, and the engine kicks back.

broken if you wrap t around the important. Your thumb could be same side as your fingers - this is very around the handle. Keep it on the pnt do not wrap your thumb 10. Grasp the starting handle firmly in one

button, press it in when starting from If the engine is fitted with a cold start

into the decompression position. Move the decompression valve lever the shaft easily.

also that the nandle slides on and off the ratchet mechanism works. Check check by turning it anti-clockwise that 7. Fit the starting handle to the shaft, and that could get caught.

engine. Also, make sure that you have no loose clothing or flapping sleeves Do not wear gloves when you start the 'uonsod

Check the throttle lever is in the IDLE

- position. Move the STOP control to the RUN you try to start the engine.
 - жогьа пемір

Otherwise, follow the instructions special instructions, follow the If the hire company has given you

This section describes the starting

move your fuel can to a safe cool place. 9. Put all fuel caps back on properly, and

If any fuel is spilt on your clothes,

If any fuel is spilt on the ground, wipe it of fuel soaked cloth carefully.

yourself or the machine.

Clean the filter cap and the area from the work area.

If possible, move the machine away

BEFUELLING

Check the oil and fuel levels before

procedure for most diesel engines.

STARTING THE ENGINE

change them straight away.

up or cover it with soil.

 
Wipe any fuel off the machine. Dispose

refuelling. Do not spill any fuel on 5. Use a funnel and clean petrol when

around it to prevent dirt talling into the

2. Stop the engine and let it cool down.

No smoking.



44 (0) 121 380 4600 44 (0) 121 333 4109

make sure the water is clean. If your supply is from a water tank

WATER SUPPLY

you must know how to control it and controls. Before you start the washer Make sure you understand all of the setting-up the machine.

connections get dirty when you are Make sure that none of the hose Make sure that all the pressure hose connections are firm and tight.

away to reduce noise. supplied by the hire company. These allow you to site your machine further Extension hoses may have been

vehicles may run over it. machine. Ensure it is laid out safely with no kinks, away from where Use only the hose supplied with the

damaged, do not use the pressure washer – contact the hire company. Check your machine, engine, pressure water hoses, and equipment. If anything is fo

PRESSURE WASHER







BAY 788 Iludilos The Crescent Birmingham Business Park noo sinegen uch



protective equipment. need to wear appropriate personal Anybody working near to you will also gloves that are waterproof.

You should wear overalls, boots and HISCHILLS.

VISOR OF GOGGIES WHEN WORKING WITH THIS You must wear an impact resistance

Particular jobs or environments may require a higher level of protection. whenever you use this pressure washer. ed bluods that muminim protective equipment (PPE) are the 1. The following items of personal

OPERATORS

sny electricity supply socket. danger of water being sprayed onto Set up the work area so that there is no drainage for the waste water.

erect barriers. Make sure there is good and water spray. Use a wash bay, or Protect other people from the noise

and that no-one is near to distract you. Make sure that the area is clear and safer

always be required. extraction ventilation will almost has been fully assessed. Mechanical suitability and the ventilation required use it in other indoor situations it its nse it in domestic premises and only carbon monoxide poisoning. Never confined spaces could cause Using this equipment indoors or in

ignite fumes from petrol, or gas there is a danger of explosion. It will Do not use this pressure washer where

WORK AREA

