



than the recommended daily time.

appropriate lifting equipment.

trap yourself in a corner.

slop and never across it.

across the site.

For guidance on managing construction health risks go to

www.hse.gov.uk/construction

Using the Reversible Diesel Plate Compactor

The centrifugal clutch on reversible compactors stops the plate vibrating while the engine is

Watch for signs that vibration may be affecting hands. If fingers start to tingle or feel numb, take a short break from using the machine. Exercise fingers to encourage blood circulation. To help prevent vibration affecting hands, operate the machine for shorter periods. Keep

hands warm - wearing gloves may help do this. Do not operate the compactor for more

This machine will move forward or backwards and can be manoeuvered easily while the plate is vibrating. Be careful not to strain yourself by trying to move it; get assistance or use

When reversing take care not to: reverse over feet, trip over while walking backwards or

Some reversible plate compactors have a safety feature if the operator loses control and

releases the handle when being used in reverse. The handle will swing up vertical and the

If the surface to be compacted is sloping, take great care and only work up and down the

12. If necessary attach a suitable piece of rope to a low point on the compactor chassis to

When the compactor is not being operated, stop the engine and turn off the fuel valve.

14. If the compactor has tranpsort wheels ensure they are fixed properly to move the machine

15. If the compactor has to be left unattended for long periods, overnight for example, ensure

16. If the equipment does not work properly do not attempt to repair it. Contact the hire

Please keep this leaflet safely as it may be required for future reference

compactor will change into forward motion, allowing the operator to recover control. 10. Do not try to force the compactor to move faster, allow it to travel at its own speed forward

or reverse; this will vary depending on the surface being compacted.

enable an assistant to take part of the compactor's weight.

Always keep hands, feet and clothing away from moving parts of the compactor.





Wear your protective equipment including ear defenders and safety boots

Always grip the plate compactor correctly with two hand while working.

idling. The trhottle should be set to maximum when working.

# 0137 Safety Guidance

## **Reversible Diesel Plate Compactor**

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

#### It is important to read this entire leaflet BEFORE using the Reversible Diesel Plate Compactor

- Plan work and think ahead to ensure work will always be carried out safely.
- Diesel fuel is highly flammable. Take care not cause a fire or explosion.
- The vibration from these machines may cause discomfort after prolonged use. Check the label on the machine or ask the hire company.



- This reversible compactor is designed to compact crushed hardcore, backfill, asphalt and other materials on level surfaces or gentle slopes. This place compactor is heavy, it can cause injury or damage if it is not handled at all time
- in a careful and controlled way. If you have not used a reversible plate compactor before, receive instruction or guidance
- before using it. Star work in a safe area until familiar with its use. The following items of PPE (personal protective equipment) are the minimum required:
- Goggles, Dust Mask -minimum of FFP3 protection, Ear Muffs or plugs giving protection of 85 dB(A) at the ear; Safety Boots and Gloves. This machine must not be used by monors or by anyone under the influence of durgs or
- The plate compactor is designed for operation by an able bodied adult. Anyone with either a temporary of permanent disability should seek expert medical advice before using the

have the force of law and only the courts can authoritatively interpret the law.







to have arisen from the use of any such document/material. Only Acts of Parliament have the force of law and only the sounds.







VP Hire Station





Stop the engine by operating the STOP

Guide the cord back into place so that it

engine, then pull it quickly and strongly.

can feel the starter has engaged with the

Pull the starter handle slowly until you

it will not move when the starter is pulled.

Ensure that the machine is held firmly so

Stop the engine by operating the STOP

use rne cold start device. I ne engine can 6. If the engine is warm, there is no need to

operate the cold start for a little longer.

seconds look to see if there is any smoke coming from the exhaust. If there is, try repeating the start procedure but apparet he shart for little leave.

If the equipment fails to start after a few

cause the machine to move as the

Do not have the throttle fully open when

start device for twenty seconds before

If the engine is cold, operate the cold

The machine may have a cold start device. This may be the first position of

starting switches - may be a key

Different machines will have different

operated switch or separate buttons.

the switch, or a separate button.

starting, then operate the start control.

or the centrifugal clutch

be started straight away.

Do not pull too far, or it may break.

it is safe from vandalism or theft.



2450 Regents Court









©Copyright Hire Association Europe April 2011

Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

control.

Recoil Start

engine rires.

Electric Start

engine running. This may automatically prevent the

Check the oil level has not fallen too low surface. The equipment should be on a level

deneral guideline. instructions - follow them. If not follow these If the hire company has give specific starting

#### STARTING THE ENGINE

nove the fuel can to a safe, cool place Put all fuel caps back on properly and

If any fuel is spilt on clothes, change

nb or cover it with soil. If any fuel is spilt on the ground, mop it

of the fuel soaked cloth carefully. Wipe any fuel off the machine. Dispose yourself or the machine.

refuelling. Do not spill any fuel on Use a funnel and clean diesel when it to prevent dirt talling into the fuel tank.

Clean the filler cap and the area around the work area. If possible move the machine away from 3.

Stop the engine and allow to cool down. .S 1. No smoking.

#### **BEFUELLING**

removed for work. ensure they are safely stowed, or 4. It the compactor has transport wheels company.

44 (0) 121 380 4600 44 (0) 121 333 4109

the final surface. Check with the hire a rubber mat fixed to the plate to protect Some surfaces, like paving blocks, need sticking to the plate.

water spray to prevent the surface When compacting aphalt or tarmac, us a enpplied as standard with the machine.

Some or all of the accessories may be **VCCESSOBIES** 

Before starting the machine, know how to Ensure you understand all of the controls. hands warm while working.

starting work, and wear gloves to keep Vibration from using this plate compactor can be hazardous. Warm hands before correctly with two hands while working. grip the plate compactor AIWays

to be damaged - contact the hire

Check the machine, engine and all equipment. Do not use anything found when moving it into position. Take care assistance when lifting the plate compactor off a transport vehicle and This is a heavy machine.

#### PLATE COMPACTOR

brotective equipment. need to wear appropriate personal

working with the plate compactor. Safety Boots must be worn when compacting material that causes dust minimum of FFP3 must be worn when An appropriate dust mask with a

**BAY 788 Iludilos** 

noo sinegen uch

The Crescent Birmingham Business Park

working with the machine. Goddies sponia always be worn when

when operating the skip loader for long ear muffs or plugs giving hearing protection for this level as a minimum levels up to 85 dB(A) - wear appropriate The equipment is likely to cause noise

or environment may require a higher naing the plate compactor. Particular minimum that should be worn whenever protective equipment (PPE) are the

The following items of personal

### **OPERATORS**

evel of protection.

or other services laid just beneath the may damage undergiround pipes, cables The compacting action to this machine away, erect barriers around the work area debris and dust. Warn others to keep Protect othejr people from the noise,

is closeby who could cause Ensure the area is clear and safe and noventilation will almost always be required. Mechanical the ventilation required has been fully other indoor situations if its suitability and in domestic premises and only use it in carbon monoxide poisoning. Never use it confined spaces could cause fatal Using this equipment indoors or in kom betrol or gas cylinders.

danger of explosion. It will ignite fumes Do not use the machine where there is a

**WORK AREA** 



Anyone who is working closeby will also of a safety helmet.

Site regulations may require the wearing



















Before Starting Work.