



## Using the Jigsaw

1. Wear your protective equipment including ear defenders, dust mask and goggles.
2. Always hold the saw properly when working. Keep hands clear of the blade.
3. Check that the blade is fitted correctly.
4. To prevent damage to the blade, check that there are no nails, screws or metal embedded in the work piece.
5. Let the blade stop completely before withdrawing it from the work piece.
6. Stop, switch off and remove the plug from the socket before making adjustments or changing the blade.
7. Make sure that any ventilation slots in the jigsaw are clear; do not cover them with your hand when you hold the saw.
8. If the saw starts to labour and slow down, do not force it so hard. Do not overload the saw.
9. Keep the cable clear of the blade and any sharp edges on your work.
10. Stop the saw if someone approaches you.
11. Keep the cable clear of the blade.
12. If you think the cable may be cut or damaged in any way, switch off and unplug at the socket before inspecting it. If the cable attached to the reciprocating saw is damaged, stop using the machine. Contact the hire company. If an extension cable has been damaged, do not use it again.
13. Take care not to accidentally pull the plug from the socket.
14. After switching off, wait for the blade to stop completely before you put the machine down.
15. Switch off and remove the plug from the socket before leaving the reciprocating saw unattended.
16. If your equipment does not work properly do not attempt to repair it. Contact the hire company.
17. You may want to read this leaflet again. Please keep it until you finish work.



**Hae**  
HIRE ASSOCIATION EUROPE

Hire Association Europe  
2450 Regents Court  
The Crescent  
Birmingham Business Park  
Soliuhull B37 7YE

Telephone: 44 (0) 121 380 4600  
Fax: 44 (0) 121 333 4109  
Email: [mail@hae.org.uk](mailto:mail@hae.org.uk)  
website: [www.hae.org.uk](http://www.hae.org.uk)

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

### It is important to read all of this leaflet BEFORE you use the Jigsaw

1. Electricity is dangerous and must always be used with great care.
2. This jigsaw is designed to cut wood, laminates, metal and plastics and wallboards. It is not designed for any other purpose. Do not use it for cutting anything that may contain asbestos.
3. The action of this jigsaw can cause injury or damage if the machine is not used in a careful and controlled way.
4. If you have not used a jigsaw before, familiarise yourself with the machine on some straightforward work before you start on the main task.
5. Plan your work and think ahead to make sure you will always be working safely.
6. You must have at least the following items of personal protective equipment: goggles: EN166 or BS2092; dust mask - a minimum of EN149 FFP3(s) protection; Safety boots to EN345 or BS1870/4972; industrial quality gloves; residual-current device (RCD) if using a 230 volt (mains) supply.
7. A personal first-aid kit should be available.
8. This jigsaw must not be used by minors, or by anyone under the influence of drugs or alcohol.
9. This jigsaw is designed for operation by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.
10. Although jigsaws are designed for one person operation you should always be careful you do not lift beyond your own capabilities.



Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting material is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments have the force of law and only the courts can authoritatively interpret the law.

Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

- 230 VOLT MACHINES (SQUARE PIN OR BLUE PLUG)**
1. Use a residual current device (RCD) plugged directly in to the 230volt socket. Plug your machine into the RCD. This will help to protect you against electric shock if the cable or machine gets damaged.
  2. Use the "TEST" button to check that the RCD is working each time you use it. Reset the RCD according to the instructions supplied with it.
  3. If you need to use an extension cable, follow any special instructions given by the hire company. If the hire company has not given any special instructions, you should only use a suitably rated heavy duty one, no longer than 50 metres (160 feet). Plug it directly into the RCD.
  4. Lay it out carefully avoiding liquids, sharp edges, doorways or windows where it might be trapped, and places where vehicles might run over it. Unroll it fully or it will overheat and could catch fire.
  5. Make sure that any extension cable connections are dry and safe.
- Summary:**
- 110V: Wall socket > transformer > necessary extension cable > > any necessary extension cable > jigsaw.
- 230V: Wall socket > RCD > any necessary extension cable > jigsaw.
- 110 VOLT MACHINES (YELLOW PLUG)**
1. If you are using a portable transformer, plug the transformer directly into the 230 volt socket. Do not use any 230v extension cables.
  2. If you need to use an extension cable, follow any special instructions given by the hire company. If the hire company has not given any special instructions, you should only use a suitably rated heavy duty 110v extension cable, not longer than 50 metres (160 feet).
  3. If you need to use an extension cable, follow any special instructions given by the hire company. If the hire company has not given any special instructions, you should only use a suitably rated heavy duty one, no longer than 50 metres (160 feet). Plug it directly into the RCD.
  4. Lay it out carefully avoiding liquids, sharp edges, doorways or windows where it might be trapped, and places where vehicles might run over it. Unroll it fully or it will overheat and could catch fire.
  5. Make sure that any extension cable connections are dry and safe.



1. Lay the extension cable out carefully avoiding liquids, sharp edges, doorways or windows where it might be trapped, and places where vehicles might run over it. Unroll it fully or it will overheat and could catch fire.
2. Make sure that the area is clear and safe and that no-one is near to you or could distract you.
3. Protect other people from the dust. Set up an exclusion zone around the area where the jigsaw is being used with physical barriers, barrier tape and signs. Keep children and animals away when using this equipment.
4. Work should stop immediately should anyone, other than those directly assisting with the work, enter the exclusion zone.
5. Clear the area of trip hazards such as rubble, rubbish etc.
6. Do not use this saw in the rain or where it might get wet.
7. Any work that is not part of a fixture should be securely clamped or held in a vice.

Useful Reference Points • [www.hae.org.uk/businessguard](http://www.hae.org.uk/businessguard)

## Before Starting Work...



1. Check your saw, cables, plugs and personal protective equipment.
2. Check that the plug on your jigsaw matches your supply. Do not try to force connections or improvise them.
3. Saws with a cylindrical yellow industrial plug fitted are designed to run off an 110v supply. The hire company will have provided a portable transformer if you need to power the machine from a normal mains 230v supply. If a portable transformer has been supplied, take care not to injure yourself when moving it about - it may be heavier than you think. Saws designed to run directly from 230v mains will have either a normal square pin plug fitted, or a blue industrial plug fitted. 230v machines will have a yellow industrial plug fitted. It will be 110v or 230v.
4. Make sure that blade is fitted correctly.
5. Most materials will cut better if an approved cutting lubricant is used.
6. Make sure you use the correct fitting blade for this machine recommended by the hire company.
7. Make sure you use the correct fitting blade for this machine recommended by the hire company.
8. Switch off and remove the plug from the socket before making adjustments or changing the blade.
9. Make sure you use the correct fitting blade for this machine recommended by the hire company.
10. Make sure that blade is fitted correctly.
11. Your machine will only operate on one voltage: it will be 110v or 230v.
12. 110v machines will have a yellow industrial plug fitted. 230v machines will have either a normal square pin plug fitted, or a blue industrial plug fitted. Read the instructions below for your machine.
13. If you are using a portable transformer, plug the transformer directly into the 230 volt socket. Do not use any 230v extension cables.
14. If you need to use an extension cable, follow any special instructions given by the hire company. If the hire company has not given any special instructions, you should only use a suitably rated heavy duty 110v extension cable, not longer than 50 metres (160 feet).
15. If you need to use an extension cable, follow any special instructions given by the hire company. If the hire company has not given any special instructions, you should only use a suitably rated heavy duty one, no longer than 50 metres (160 feet). Plug it directly into the RCD.
16. Lay it out carefully avoiding liquids, sharp edges, doorways or windows where it might be trapped, and places where vehicles might run over it. Unroll it fully or it will overheat and could catch fire.
17. Make sure that any extension cable connections are dry and safe.

1. Check your saw, cables, plugs and personal protective equipment.
2. Check that the plug on your jigsaw matches your supply. Do not try to force connections or improvise them.
3. Saws with a cylindrical yellow industrial plug fitted are designed to run off an 110v supply. The hire company will have provided a portable transformer if you need to power the machine from a normal mains 230v supply. If a portable transformer has been supplied, take care not to injure yourself when moving it about - it may be heavier than you think. Saws designed to run directly from 230v mains will have either a normal square pin plug fitted, or a blue industrial plug fitted. 230v machines will have a yellow industrial plug fitted. It will be 110v or 230v.
4. Make sure you use the correct fitting blade for this machine recommended by the hire company.
5. Most materials will cut better if an approved cutting lubricant is used.
6. Make sure you use the correct fitting blade for this machine recommended by the hire company.
7. Make sure you use the correct fitting blade for this machine recommended by the hire company.
8. Switch off and remove the plug from the socket before making adjustments or changing the blade.
9. Make sure you use the correct fitting blade for this machine recommended by the hire company.
10. Make sure that blade is fitted correctly.
11. Your machine will only operate on one voltage: it will be 110v or 230v.
12. 110v machines will have a yellow industrial plug fitted. 230v machines will have either a normal square pin plug fitted, or a blue industrial plug fitted. Read the instructions below for your machine.
13. If you are using a portable transformer, plug the transformer directly into the 230 volt socket. Do not use any 230v extension cables.
14. If you need to use an extension cable, follow any special instructions given by the hire company. If the hire company has not given any special instructions, you should only use a suitably rated heavy duty 110v extension cable, not longer than 50 metres (160 feet).
15. If you need to use an extension cable, follow any special instructions given by the hire company. If the hire company has not given any special instructions, you should only use a suitably rated heavy duty one, no longer than 50 metres (160 feet). Plug it directly into the RCD.
16. Lay it out carefully avoiding liquids, sharp edges, doorways or windows where it might be trapped, and places where vehicles might run over it. Unroll it fully or it will overheat and could catch fire.
17. Make sure that any extension cable connections are dry and safe.

## WORK AREA

1. Do not use this jigsaw where there is a danger of explosion. It will ignite fumes from petrol, or gas cylinders.
2. Make sure that the area is clear and safe and that no-one is near to you or could distract you.
3. Protect other people from the dust. Set up an exclusion zone around the area where the jigsaw is being used with physical barriers, barrier tape and signs. Keep children and animals away when using this equipment.
4. Work should stop immediately should anyone, other than those directly assisting with the work, enter the exclusion zone.
5. Clear the area of trip hazards such as rubble, rubbish etc.
6. Do not use this saw in the rain or where it might get wet.
7. Any work that is not part of a fixture should be securely clamped or held in a vice.
8. You must wear safety boots (EN345 or BS1870/4972).
9. You must wear safety boots (EN345 or BS1870/4972).
10. You must wear safety boots (EN345 or BS1870/4972).